

## DEPARTURE PROCEDURES

### PARKING AREAS

**BLUE RED** Non-movement area in front of Atlantic Aviation. This area may include taxiways A3 and A4.

**BROWN** Non-movement area located at UPS ramp.

**YELLOW** Non-movement area associated with the Executive ramp and all associated parking areas located north of the air traffic control tower.

### PROCEDURES

1. Call Clearance (121.9) no earlier than 20 min prior to your proposed time.
2. Atlantic Aviation will direct aircraft operations on non-movement areas.
3. Contact Ground Control (121.7) ONLY when you are #1 at points ①, ②, or ③.

#### **BLUE RED BROWN**

① Holding short of taxiway A at A2 for Runway 27L.

② Holding short of taxiway N at A for Runway 9R/9L/27R/18/36.

#### **YELLOW**

③ Holding short of taxiway N. (Single Engine Aircraft expect RY9L/27R)

*“South Bend Ground (Call Sign) number one at (Point ①, Point ②, or Point ③) Ready for Taxi.”*


4. Aircraft not parked in a colored parking area, or at Michiana Aircraft Service, contact Ground Control (121.7) prior to any movement.

**SAFETY FIRST!**

SBN ATIS FREQ:  
118.15

ATLANTIC AVIATION  
FREQ: 122.95

## SBN SPECIAL EVENT DEPARTURE PROCEDURES

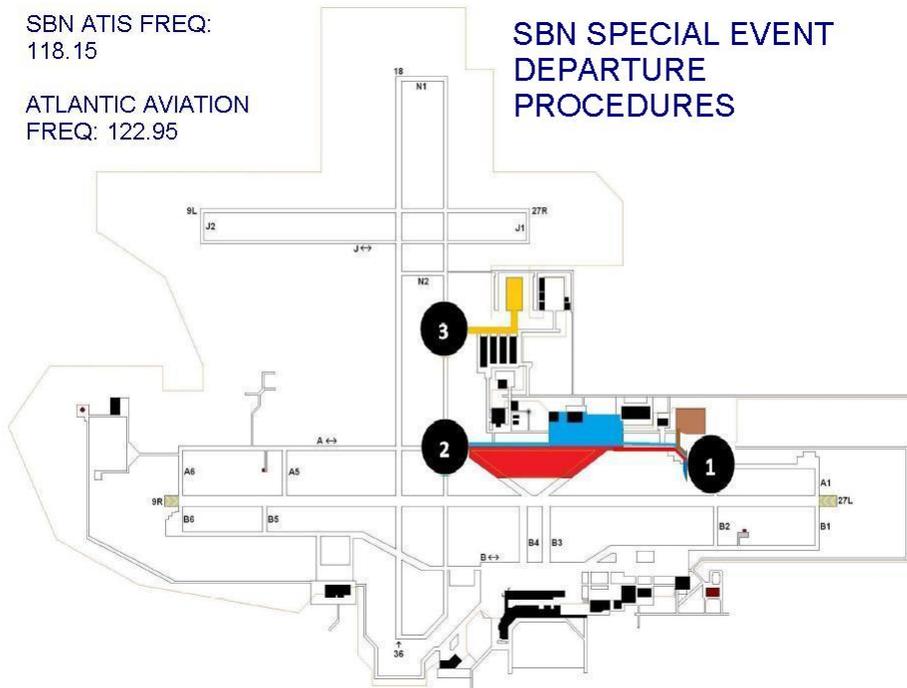

ATIS CODE \_\_\_\_\_

WIND \_\_\_\_\_ VSBY \_\_\_\_\_

TEMP \_\_\_\_\_ DP \_\_\_\_\_

ALTIMETER \_\_\_\_\_

BLUE      RED      BROWN      YELLOW

CLEARANCE:

ALTITUDE \_\_\_\_\_

FREQUENCY \_\_\_\_\_

RUNWAY \_\_\_\_\_