

SPECIAL OPERATIONS DEPARTURE PROCEDURES

SOUTH BEND INTERNATIONAL AIRPORT


RED Non-Movement Area between TWY N and North Cargo Apron

BLUE Non-Movement Area on north GA Aprons

SPOT 1 Holding short of TWY A2 on TWY A for RWY 27L

SPOT 2 Holding short of TWY N on TWY A for RWY 9R, 18-36, 9L-27R

SPOT 3 Holding short of TWY N on Taxiway T

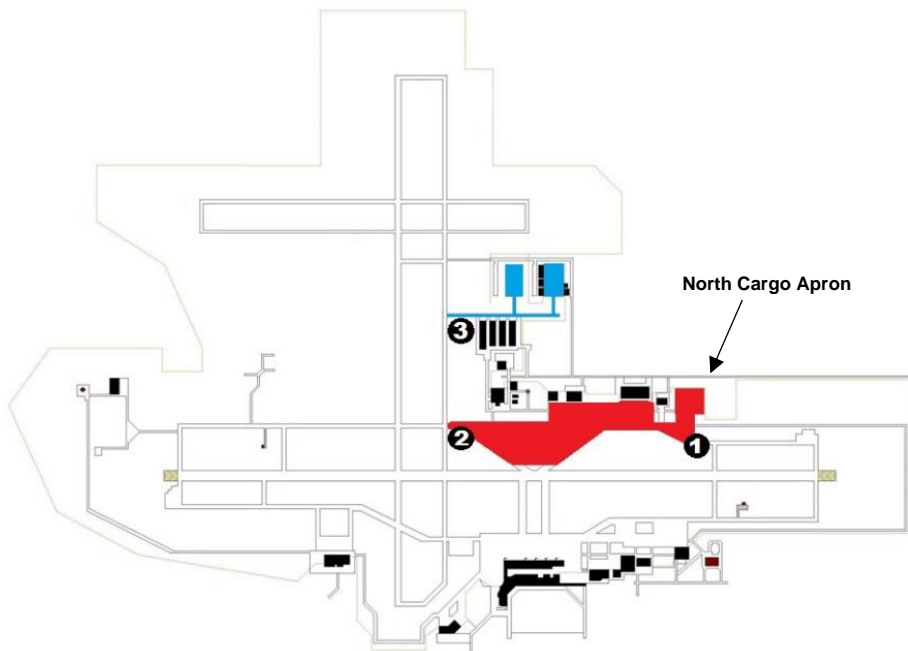

ATIS: 120.675
Clearance Delivery: 121.90
Ground Control: 121.70
Tower: 118.90

Atlantic Aviation: 122.95
Corporate Wings: 131.70

SPECIAL PROCEDURES

1. Call SBN Clearance Delivery no earlier than 20 minutes prior to departure.
2. Proceed within non-movement area toward departure runway. Stop at appropriate Spot (1, 2, or 3).
3. FBO personnel direct aircraft operations ONLY on non-movement areas.
4. Contact SBN Ground Control ONLY once you are #1 at Spots 1, 2, or 3.

“South Bend Ground, (Call Sign) is number one at (Spot 1, 2, or 3) and is ready for taxi.”

5. Aircraft not parked in a colored parking area must contact Ground Control prior to any movement.